

Rowenta®

IRONING BOARDS

Board

Set up board on flat, level surface. Be sure it is stable.

To open: Lift lever located under board and raise board to desired height. Release lever to lock the board in place. (Note: ideal height for ironing allows palms of hands to rest flat on board with arms fully extended.)

To close: Lift lever and lower board until it is closed. Release lever to lock into place. Make sure ironing board has been locked into safety position before moving or storing.

Cover

Use cord to tighten cover, ensuring cover is over edges of board. Cover is slightly bigger than board but will tighten with use. Cover should fit board tightly.

Washing instructions: Machine wash on gentle cycle in warm (86) water. Do not wash in hot water. Hang to dry as a dryer will cause cover to shrink. Do not use bleach.

Iron Rest

The iron rest will hold most irons at a 45 degree angle. The silicon frame is heat resistant. Place iron, heel downwards, into the rest until it is secure.

Tips

Sort laundry to be ironed by temperature requirements. Start with lowest heat setting and work towards highest.

Use iron rest rather than placing iron on board surface. This will help keep cover clean and ensure stability when iron is not in use.

Store board with iron rest at top.

Be sure not to lean on board or to use it for other than its intended use.

LIMITED WARRANTY

Rowenta Inc. warrants this product for ten (10) years from date of purchase against defects in material and workmanship. During this period, any Rowenta ironing board that, upon inspection by Rowenta, is proved defective, will be replaced, without charge to the customer. If a replacement is sent, it will carry the remaining warranty of the original board. This warranty does not apply to any defects arising from a buyer's or user's misuse of the product, negligence, failure to follow Rowenta's instructions, or alterations not authorized by Rowenta. The ironing board cover and pad are subject to wear and tear and are excluded from this warranty. THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, ARE MADE BY ROWENTA OR ARE AUTHORIZED TO BE MADE WITH RESPECT TO THE PRODUCT. Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. If you believe this product is defective, send it, a letter explaining the claimed defect, and a copy of the sales receipt (postage prepaid) to:

Rowenta Returns
2121 Eden Road, Millville, NJ 08332

Note: Ironing board is intended for household use only. Do not use for other than intended use.